

## Congratulations on your purchase of the Andrea Noise Canceling Headset NC-185!

The Andrea Noise Canceling Headset NC-185 features, state-of-the-art, Noise Canceling microphone technology that removes background noise

Users receive:

- Andrea microphone technology in a high-fidelity, headset that can be easily folded flat for convenient storage
- Quality metal flex boom keeps microphone accurately positioned in place
- Enhanced speed and accuracy of PC speech-driven applications

Connecting the NC-185

To connect the Andrea Noise Canceling Headset NC-185 to your computer's sound card:

1. Plug the pink microphone jack (indicated by a microphone icon) into the "mic in" port.
2. Plug the green speaker jack (indicated by a sound icon) into the "speaker" port.

### COMPATIBILITY

The NC-185 is compatible with most major sound cards, computers and laptops.

C46-5433 REV D

### HEADSET INSTRUCTIONS

1. Fit the adjustable headband over your head to secure the headset with the speakers resting comfortably around your ears.

Note: The microphone boom can rotate to adapt to either the right or left side of your head.

2. Adjust the microphone boom so that the microphone is approximately 3/4" in front of your mouth, making sure that you are talking into the voice side of the microphone, indicated by the white dot.

### TROUBLESHOOTING

If you encounter the following problems:

No sound from headset ear piece while an audio CD plays from computer.

- A. Check all connections.
- B. Consult your sound card instruction booklet
- C. Check output volume level adjustment in software.

Microphone does not record sound when using a voice-recording application.

- A. Check all connections.
- B. Bring the microphone closer to your mouth.
- C. Check input control for proper level in software.
- D. Check that microphone is not muted in the PCs microphone audio panel.



**NC-185  
HEADSET**

### TECHNICAL SERVICE







We hope that you enjoy your Andrea NC-185 Headset. If you have additional questions, please visit our website at: [www.andreacommunications.com/support](http://www.andreacommunications.com/support) or call Andrea Communication's Technical Service team at 1-800-442-7787 (USA & Canada) for assistance.

### WARRANTY INFORMATION

Please visit our website at: [www.andreacommunications.com/warranty](http://www.andreacommunications.com/warranty)

Package includes: One (1) NC-185 Headset,  
and  
One (1) NC-185 Headset Publication.



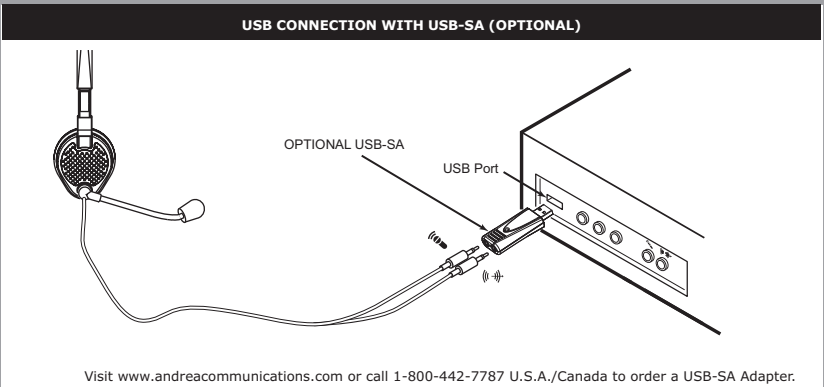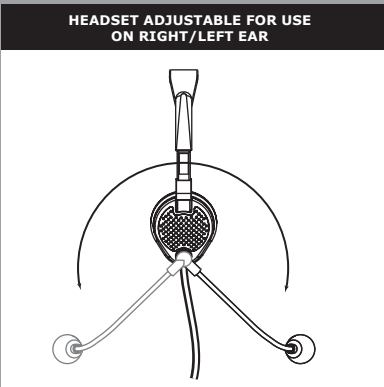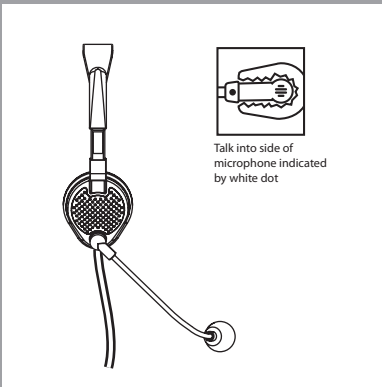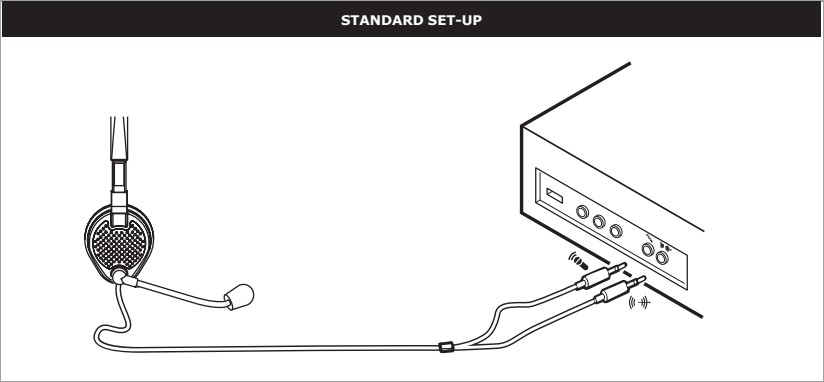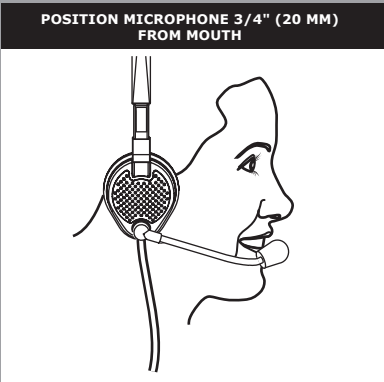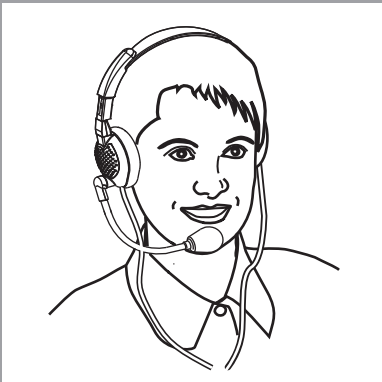

Visit [www.andreacomunications.com](http://www.andreacomunications.com) or call 1-800-442-7787 U.S.A./Canada to order a USB-SA Adapter.